

MOD.
SP7170

solac



HAIR DRYER

INSTRUCTIONS FOR USE

Solac is a registered Trade Mark

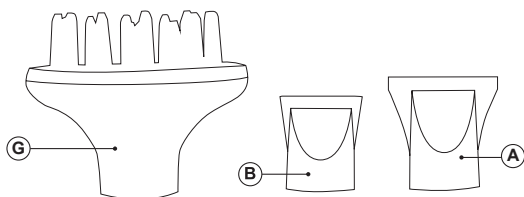 
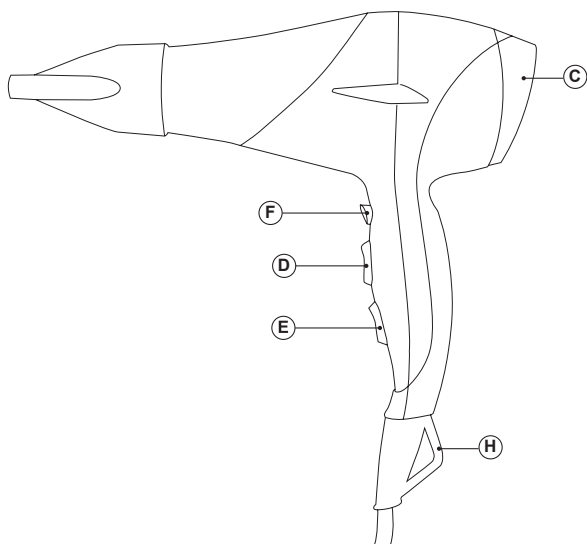 


Fig.1

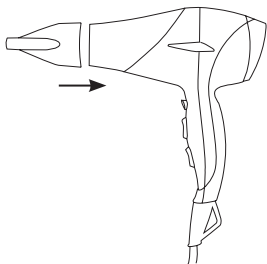 


Fig.2

 
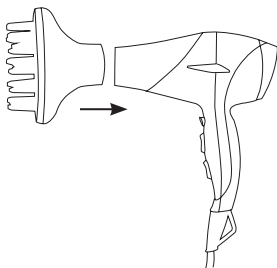 


Fig.3

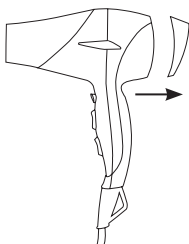

English

Hair dryer

SP7170

Dear customer,

Many thanks for choosing to purchase a SOLAC brand product.

Thanks to its technology, design and operation and the fact that it exceeds the strictest quality standards, a fully satisfactory use and long product life can be assured.

Read these instructions carefully before switching on the appliance and keep them for future reference. Failure to follow and observe these instructions could lead to an accident.

Safety advice and warnings

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or ins-

truction concerning use of the appliance in a safe way and understand the hazards involved.

- Cleaning and user maintenance shall not be made by children unless they are supervised.
- This appliance is not a toy. Children should be supervised to ensure that they do not play with the appliance.
- If you use the appliance in a bathroom or similar place, unplug the appliance from the mains when it is not in use, even if it is only for a short while, as proximity to water involves a risk, even if the appliance is

disconnected.

- As an additional protection to the electrical supply for the appliance, it is advisable to have a differential current device with a maximum sensitivity of 30 mA. Ask for advice from a competent installer.

- **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



- This symbol means that product must not be used near water.
- If the connection to the mains has been damaged, it must be replaced, take the appliance to an

authorised technical support service. Do not attempt to disassemble or repair the appliance by yourself in order to avoid a hazard.

- Ensure that the voltage indicated on the rating label matches the mains voltage before plugging in the appliance.
- Connect the appliance to a socket that can supply a minimum of 16 amperes.
- The appliance's plug must fit into the mains socket properly. Do not alter the plug. Do not use plug adaptors.
- Do not force the power cord. Never use the power cord to lift up, carry or unplug the appliance.
- Do not wrap the power cord around the appliance.
- Do not clip or crease the power cord.
- Do not allow the power cord to hang or to come into contact with the hot surfaces of the appliance.
- Check the state of the power cord. Damaged or tangled cables increase the risk of electric shock.
- Do not touch the plug with wet

- hands.
- Do not use the appliance if the cable or plug is damaged.
 - If any of the appliance casings breaks, immediately disconnect the appliance from the mains to prevent the possibility of an electric shock.
 - Do not use the appliance if it has fallen on the floor, if there are visible signs of damage or if it has a leak.
 - CAUTION: Maintain the appliance dry.
 - Do not use the appliance with damp hands or feet, or when barefooted.
 - Supply cord should be regularly examined for signs of damage, and if the cord is damaged, the appliance must not be used.
 - The temperature of the accessible surfaces may be high when the appliance is in use.
 - Do not use hair sprays or other spray product whilst the machine is switched on.
 - CAUTION: In order to prevent overheating do not cover the appliance.
 - Ensure that neither the air access nor exit become either totally or partially covered by drapery, clothing, etc., as this increases the risk of fire.
 - Do not use the appliance if its accessories are not properly fitted.
 - Do not use the appliance if the accessories attached to it are defective. Replace them immediately.
 - Do not use the appliance if the on/off switch does not work.
 - Unplug the appliance from the mains when not in use and before undertaking any cleaning task.
 - This appliance is for household use only, not professional, industrial use.
 - Store this appliance out of reach of children and/or persons with physical, sensory or reduced mental or lack of experience and knowledge.
 - Make sure that dust, dirt or other foreign objects do not block the fan grill on the appliance.
 - Keep the appliance in good condition. Check that the moving parts are not misaligned or jammed and make sure there are no broken parts or anomalies that may prevent the appliance from operating correctly.
 - Never leave the appliance unattended while in use.
 - Do not use the appliance to dry pets or animals.
 - Do not use the appliance to dry textiles of any kind.

USE AND CARE:

- Fully unroll the appliance's power cable before each use.

SERVICE:

- Any misuse or failure to follow the instructions for use renders the guarantee and the manufacturer's liability null and void.

Description

- A Concentrator nozzle 9X55MM
- B Concentrator nozzle 7X55MM
- C Filter
- D Speed Selector
- E Temperature Selector
- F Cold Shot Button
- G Diffuser
- H Hanging ring

Instructions for use

BEFORE USE:

- Make sure that all products' packaging has been removed.

USE:

- Unroll the cable completely before plugging it in.
- Connect the appliance to the mains.
- Guide the appliance to direct the flow of air in the desired direction.
- Turn the appliance on, by using one of the speed selection buttons.
- Select the desired temperature.

HOW TO DRY THE HAIR:

- Move the appliance around in circles to distribute the air along

the hair.

- For best results, we recommend selecting minimum speed and temperature.

IONIC FUNCTION:

- Once the appliance is in operation, it automatically activates the generation of negative ions.
- Negative ions are useful for removing the static electricity and hair frizz.

COOL AIR BLOW:

- This feature provides a flow of cool air to help to shape the hair.
- Press the cool air blow button (E) to use this function.

ONCE YOU HAVE FINISHED USING THE APPLIANCE:

- Turn off the appliance by selecting 0 on the speed regulator (C)
- Unplug the appliance from the mains.
- Clean the appliance

ACCESSORIES:

Air concentrator accessory (A):

- This accessory is used to concentrate the air flow into one specific area.
- Attach the accessory to the appliance. Press so that it is secure. (Fig.1).

DIFFUSER ACCESSORY (G):

- This accessory is used to harmonize the air flow into one specific area.
- Attach the accessory to the appliance. Press so that it is secure. (Fig.2).

Cleaning

- Disconnect the appliance from the mains and allow it to cool before undertaking any cleaning task.
- Clean the equipment with a damp cloth with a few drops of washing-up liquid and then dry.
- Do not use solvents, or products with an acid or base pH such as bleach, or abrasive products, for cleaning the appliance.
- Do not let water or any other liquid get into the air vents to avoid damage to the inner parts of the appliance.
- Never submerge the appliance in water or any other liquid or place it under running water.

CHANGING THE FILTERS:

(Fig.3):

- It is advisable to clean the appliance regularly, as accumulated hair or dust, especially in the filter, reduces the product's performance and increases the risk of fire.
- To remove the filters:
- Open the cover that contains the filter. (Fig.3).

- To reassemble the filter, proceed with the above instructions, in reverse order.

Anomalies and repair

- Take the appliance to an authorised technical support service if product is damaged or other problems arise. Do not attempt to disassemble or repair the appliance yourself as this may be dangerous.

FOR EU PRODUCT VERSIONS
AND/OR IN CASE THAT IT IS
REQUESTED IN YOUR COUNTRY:

ECOLOGY AND RECYCLABILITY OF THE PRODUCT

- The materials of which the packaging of this appliance consists are included in a collection, classification and recycling system. Should you wish to dispose of them, use the appropriate public recycling bins for each type of material.
- The product does not contain concentrations of substances that could be considered harmful to the environment.



This symbol means that in case you wish to dispose of the product once its working life has ended; take it to an authorised waste agent for the selective collection of Waste from Electric and Electronic Equipment (WEEE).

This appliance complies with Directive 2014/35/EU on Low Voltage, Directive 2014/30/EU on Electromagnetic Compatibility, Directive 2011/65/EU on the restrictions of the use of certain hazardous substances in electrical and electronic equipment and Directive 2009/125/EC on the ecodesign requirements for energy-related products.